



Travis County Courts




Courtroom Quick Reference Guide

KVM Switch

ViewSonic Video Switcher



Getting Started - Source Selection

- On the KVM Switch choose between the following sources:
 - 1. Lectern PC (push button to select).
 - 2. Atty. Laptop (push button to select).
 - 3. Document Camera (push button to select).
- Using the Lectern PC
 - Turn Power on by pushing power button on the upper right corner of the PC.
 - Select Lectern PC button on KVM Switch.
 - Use PC to Play DVD, audio/video files and other digital media.
- Connecting an Attorney Laptop PC
 - Plug in the VGA, audio, and USB cables into your laptop.
 - Select Atty. Laptop button on KVM Switch.
 - Set your laptop resolution to 1024 x 768. This resolution is supported by all the courtroom displays
- Using the Document Camera
 - Turn Power on - Icon looks like this 
 - Select Doc Camera button on KVM Switch
 - Use Zoom in/out buttons as necessary  
- Using the DVD/VCR ***Please Use Lectern PC to play DVD disks***
 - Turn player on.
 - Select between DVD and VCR on the player.
 - Use the Viewsonic video switcher's INPUT button to toggle between five (5) possible input selections.
Note: Only Two are actively used
 - Input 1 - PC (Lectern or Attorney Laptop)
 - Input 2 - Cable TV (Not Used)
 - Input 3 - Composite (VCR or DVD)
 - Input 4 - S-Video (Not Used)
 - Input 5 - Component (Not Used)

Travis County Courts

E-Courtroom Troubleshooting Tips

All devices

Why aren't any of the video sources displaying when the KVM Switch buttons are pressed?

- ◆ There are two active settings on the **ViewSonic Switcher**:
- ◆ Input 1 PC (this setting is for Lectern PC, Atty. Laptop, and Doc Camera).
- ◆ Input 3 Composite (this for use with DVD/VCR).
- ◆ Make sure power is on (led is green when on, red when off).
- ◆ Press input button to toggle through inputs until you get to PC/Doc Cam/Atty Laptop or DVD/VCR.

Document Camera

What I presented on the document camera does not appear on any of the screens?

- ◆ Ensure that the document camera power is on. The power button appears green when it is on.
- ◆ Verify that the source selection is set properly - Doc Camera button on KVM Switch.

VCR / DVD

My VHS tape or DVD is not playing. What is the problem?

***** Please Use Lectern PC to play DVDs and other disk media*****

- ◆ Ensure that the combination DVD/VCR is powered on.
- ◆ Verify that you inserted the desired VHS tape or DVD into the DVD/VCR.
- ◆ Ensure that the DVD/VCR is set to DVD or VCR, as desired. There is a toggle button on the unit and on the remote control.
- ◆ Verify that the source selection is set properly - DVD/VCR on KVM Switch
- ◆ **See above steps for switching the ViewSonic Switcher.**

Lectern PC

The monitors are displaying something other than the Lectern PC. How do I switch to the Lectern PC?

- ◆ Ensure that the Lectern PC workstation is powered on.
- ◆ Verify that the source selection is set properly - Lectern PC on KVM Switch.
- ◆ If the system is currently displaying either cable TV, VCR, DVD or a blank blue screen, toggle the INPUT button on the Viewsonic to change selections. See the *Quick Reference Guide*, on the reverse, for details.

Attorney Laptop PC

My laptop is connected to the KVM switch, but is not displaying on any of the monitors?

- ◆ Ensure that you have connected the monitor cable to your laptop.
- ◆ Verify that the source selection is set properly - Atty. Laptop on KVM Switch
- ◆ Confirm that you have adjusted your laptop to output to a second display (as you would with projectors).
- ◆ Confirm that your laptop display resolution is set to 1024 x 768.